



# BJ1000 User Manual

## Features

- LED
- Brightness output up to 1000 lumen
- Adjustable Beam
- Rechargeable Battery with protection circuit
- Built In C Charging Port
- Optional External USB Charging Cradle for two batteries
- Precision machined aluminum alloy with hard anodized in black finishing
- Reverse Polarity protection prevents damage from incorrectly inserted batteries
- IPX65 Rated
- High/Mid/Low/SOS Mode
- 1.5M Drop Resistance

## Dimensions

Length: 148mm

Bezel Diameter: 33mm

Body Diameter: 26mm

## Accessories Included

- 1 Rechargeable Battery
- 1 USB/C Cable
- 1 BlackJack ACE Helmet Mount

## Output & Run Time

High 2.5 hours 1000lm:

Mid: 5.5 hours

Low: 12 hours

# Operating Instructions:

## Battery Installation

Unscrew end cap to access battery. Remove cardboard terminal protector if in place. Positive end of battery goes into flashlight first.

### Note:

1. Ensure the batteries are inserted with the positive ends pointing to the head. The BJ1000 will not be operational with incorrectly inserted batteries. Fully charged before first use.
2. When the BJ1000 is left unused for extended periods of time, remove battery to prevent accidental activation of the flashlight or battery leakage.

## To Switch On

Press the button at the end cap to power on to High beam, press twice for Mid power, press twice again for Low power, twice again for SOS, and once for Off mode. Leaving flashlight off for 5 seconds or longer will revert it back to High beam when turned on.

## Adjustable Beam

Unscrew lens cap end counterclockwise to narrow beam, clockwise to widen beam.

## Charging Function

The BJ1000 flashlight can recharge the battery with the included USB charging cable. Unscrew the Charging cover collar at the neck of the flashlight until the charging port appears. Connect the charging cable to the BJ1000 charging C port and a power source (USB chargers, PC or other power terminals). A red indicator light will come on next to the charging port. Under normal charging conditions, the red indicator light will illuminate steadily. When the battery is fully charged, the charging process will end automatically, and the indicator light turns green. Make sure to retighten the Charging cover for waterproof seal. Allow 4.5 hours to recharge a depleted battery.

## External Charger- optional

The external charging cradle is capable of charging two BJ1000 batteries. Insert the battery into the charging port with positive end toward plug. Insert the USB cable into power source. The red indicator light will be illuminated steadily while charging. The green indicator light will be on when it fully charged. Allow 4-5 hours for recharging of depleted batteries.

## Charging/Charging Battery

Batteries should be recharged when the light output appears to be dim or the flashlight becomes unresponsive.

### Note:

High beam will not stay on when battery is low on charge, other modes will still operate until battery is discharged. When the battery discharges quicker than the normal run time it is at end of life cycle and needs replaced.

Contact Fire Cam Support at 618-416-8390, M-F Central or [support@firecam.com](mailto:support@firecam.com) for assistance with operation or issues. External chargers and extra batteries are available to purchase at [FireCam.com/accessories/](https://FireCam.com/accessories/).

# Thank you for purchasing the BlackJack BJ1000